



HOW TO add new valves to floorplans

“One Click Installation”

v 1.1.8

Introduction

The One Click Installation empowers the local facility management to add, remove or replace smart radiator valve actuators to the online portal.

If you did not receive users and passwords for the One Click Installation UI please make sure to connect us through <https://ecosync.energy> or contact@ecosync.energy

One Click Installation User Interface (UI):

<https://hotspot.ecosync.energy/>

(For pilot users: password, username provided in the pilot kit)

We're always improving our UI. Any suggestions, bug reports are welcome.

In order to link a valve actuator to the floorplan, the following steps are required:

1. Log into <https://hotspot.ecosync.energy/> using a smartphone or a tablet with a camera QR reader
2. In the top left corner tap the house icon
3. Select VALVE ACTUATORS in the purple horizontal menu
4. Tap QR READER
5. Scan the QR code on the valve actuator
(Please note that some cameras can focus on the SIDE QR better. If neither QRs work, just select the valve actuator from the list. The IDs are printed on the sticker next to the QR code. Tap LINK on the pink menu once selected.)
6. You're on the **valve actuator linking page**. The floorplan is zoomed in by default, you might need to zoom out with a pinching motion.
7. Zoom in on the room you are in and tap on the position where the radiator is that you're working with. An E in a square icon will appear there, for the EcoSync Valve Actuator device.
8. Tap NEXT in the bottom right corner
9. You are now on the **valve actuator to room linking page**. zoom out and tap on the blue square of the room you are in.
10. Tap finish