

## Printing QR codes (instructions)

v.2.1.1

1. Log in to EcoSync dashboard where you will find a pdf file with the QR codes of your building ready to print under “Manuals”. (<https://portal.ecosync.energy/manuals>) or use the pdf file provided by EcoSync’s team
2. We recommend using **Avery** “Heavy duty white labels”, **L4776** (size: 99.1 x 42.3 mm).  
(Pilot kits include 2 sheets for printing.)

You can order them directly from here:

<https://www.amazon.co.uk/dp/B0040SOYZ0?tag=avuk085-21&linkCode=ogi&th=1&psc=1&smid=A3JWKAKR8XB7XF>

When printing on the label first open the pdf file then follow these settings instructions on your printer:

1. Always use a laser printer for best quality
2. Choose “actual size” or “100% scale”
3. Make sure that “fit to page” is NOT selected
4. Use settings: Print using system Dialog    Properties or Preferences    Change Paper or Media type to Labels or Cardstock
5. Select A4 and print a test sheet on a plain paper

Note: There is one QR code per zone, which usually means there is only 1 QR code per room, even for those rooms that have multiple radiators. The smart valve actuators get the same setting and try to reach the set temperature together in the same room. Which also means the number of QRs is the same as the number of rooms and usually less than the number of radiators / TRVs.



If you have any questions, please email to [contact@ecosync.energy](mailto:contact@ecosync.energy)